Trailered Boat Check List

Hooking Up Boat Trailer

- 1. Check that you have boat keys
- 2. Check that you have boat documentation
- 3. Check required equipment (PFD's, lights, horn, extinguishers, docking lines & fenders)
- 4. Check trailer tire pressure
- 5. Measure engine oil level
- 6. Check fuel supply, lower unit oil, power steering fluid and trim tab fluid levels
- 7. Attach trailer to vehicle's hitch and secure safety chains, back straps and trailer lights
- 8. Check trailer lights' function
- 9. Raise lower unit to trailering position before moving on roads
- 10. Walk around inspection

Launching Boat in Water

- 1. Check boat ramp for adequate depth and conditions including current
- 2. Check drain plug
- 3. Remove back straps and detach trailer lights' receptacle from vehicle
- 4. Check navigation lights and raise radio antenna
- 5. Deploy fenders and dock lines, as required
- 6. Back trailer into water
- 7. Check for water in bilge and test bilge pump
- 8. Bring lower unit to 1/2 down (for I/O), or to full down (for outboard)
- 9. Turn on blower (if inboard or I/O) for 4 minutes and smell for gasoline fumes
- 10. Start engine and warm up 3 minutes
- 11. Check forward and reverse gear shift function
- 12. Detach safety chain and winch strap
- 13. Back boat away from trailer
- 14. Depart ramp area allowing for water and current conditions

Returning Boat to Trailer

- 1. Back trailer into water at boat ramp
- 2. Raise lower unit to 1/2 up (for I/O) and approach trailer allowing for water and current conditions
- 3. Drive or winch boat onto trailer
- 4. Secure boat to trailer using trailer winch and safety chain
- 5. Pull trailered boat out of water
- 6. Attach back straps
- 7. Raise lower unit to trailering position before moving on roads
- 8. Take down bimini top, secure boarding ladder and lower radio antenna
- 9. Attach trailer lights receptacle to vehicle and check trailer lights' function
- 10. Walk around inspection

Storing Boat in Yard

- 1. Position trailer in yard and deploy trailer jack support
- 2. Detach trailer from vehicle
- 3. Lower engine's lower unit or outboard motor
- 4. Flush engine with fresh water, wash trailer, boat and drain bilge, leaving drain plug out
- 5. Turn off battery
- 6. Grease trailer wheel bearings
- 7. Replace boat cover

David Walsh, original author

Charleston Sail and Power Squadron Engine Maintenance Course

Last revised May 2016

Copyright @ 2016 Charleston Sail and Power Squadron

May be reproduced in print form or on-line for non-commercial purposes only;

please add our copyright statement & website address: CharlestonSailandPowerSquadron.org